



Quick reference: Activating your selected route

This quick reference guide covers route activation in TECDIS and TELchart ECS.

Chapter 1. Ways of activating routes


You can activate your selected route in several ways, both automatic and manual.

What	How
1 Automatic activation when you are close to the route lane (maximum 2x the width of the route lane from the route leg itself)	Auto Route activation in the <i>Safe</i> -menu has to be selected
2 Manual activation when you are close to the route lane (maximum 2x the width of the route lane from the route leg itself)	Use the route check button on the <i>route toolbar</i>
3 Automatic activation by adding a waypoint at the ship position, creating a route leg from the ship to the route start.	Auto Route activation in the <i>Safe</i> -menu and Allow route activation entry lane in <i>TECDIS/TELChart ECS Setup</i> has to be selected. Click OK on message <i>select connecting WP</i> , and choose your connecting waypoint in the chart view by clicking it.
4 Manual activation by adding a waypoint at the ship position, creating a route leg from the ship to the route start.	Allow route activation entry lane in <i>TECDIS/TELChart ECS Setup</i> has to be selected. Use the route check button on the <i>route toolbar</i> Click OK on message <i>select connecting WP</i> , and choose your connecting waypoint in the chart view by clicking it.


Chapter 2. Setting the route activation

The needed procedures outlined under **How?** in part 1 are shown here:

Allow route activation entry lane
(In TECDIS/TELchart ECS Setup program)

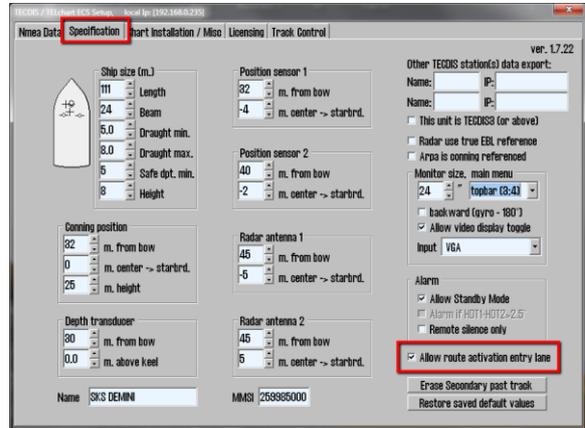

Auto route activate

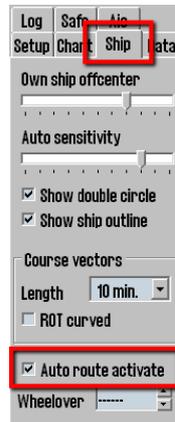

Route check button



Set connecting WP

